 


# COSORI

## User Manual

### Premium Stainless Steel Food Dehydrator

Model No.: CP267-FD

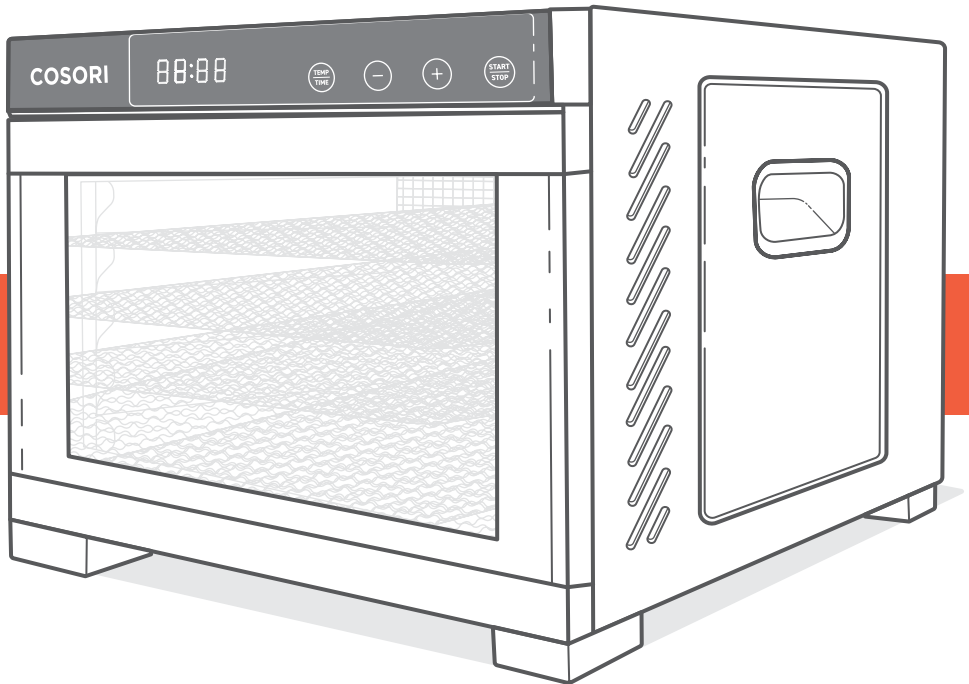

### Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684

 *Thank you for  
your purchase!* 

(We hope you love our new food dehydrator as much as we do.)



*join*

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://facebook.com/groups/cosoricooks)



*enjoy*

weekly, featured recipes  
*Penny Plates | Quick Cuisines | Easy One-Pot*



*explore*

our recipe gallery  
[www.cosori.com/recipes](http://www.cosori.com/recipes)



## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-Free:** (888) 402-1684

**M-F:** 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

*Happy cooking!*

# Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
Getting to Know Your Dehydrator	6
• Food Dehydrator Diagram	6
Display	7
Before First Use	7
Using Your Dehydrator	8
• Operation	8
• Tray Liners	9
• Overheat Protection	9
• Tips	9
Care & Maintenance	10
Troubleshooting	10
Warranty Information	11
Customer Support	12

# Package Contents

1 x Stainless Steel Food Dehydrator
6 x Trays
1 x Fruit Roll Sheet
1 x Mesh Screen
1 x Recipe Book
1 x User Manual
1 x Warranty Card

# Specifications

<b>Power Supply</b>	AC 120V, 60Hz
<b>Rated Power</b>	600W
<b>Temperature Range</b>	95°F–165°F (35°C–73°C)
<b>Product Size</b>	13.4 x 17.8 x 12.4 in (340 x 450 x 311 mm)

# IMPORTANT SAFEGUARDS

---

**Always follow basic safety precautions when using your dehydrator.**  
**Read all instructions.**

## General Safety

- **Do not** touch hot surfaces. Use handles.
- Be cautious when handling the back of the dehydrator. This area will be hotter than the rest of the dehydrator.
- **Do not** immerse cord, plug, or housing in water or other liquid.
- Closely supervise children near the dehydrator.
- Unplug when not in use, and before cleaning. Allow to cool completely before putting on or taking off parts.
- **Do not** use dehydrator if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 12).
- Using third-party parts or accessories may cause injuries.
- **Do not** use outdoors.
- **Do not** place on a stove, near gas or electric burners, or in a heated oven.
- Be extremely cautious when moving the dehydrator or removing trays if they contain hot liquid.
- To disconnect, turn off the dehydrator, then remove plug from wall outlet.
- Keep the dehydrator away from flammable materials (curtains, tablecloths, etc). Use on a flat, stable, heat-resistant surface away from heat sources and liquids.
- **Do not** store anything on top of your dehydrator while in use.
- **Do not** clean housing with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- **Do not** use where aerosol (spray) products are being used.
- **Do not** run the dehydrator for more than 48 hours at a time. After 48 hours, unplug and allow to cool for 2 hours before using again.
- Avoid contact with moving parts. **Never** place any object into the openings in the screen protecting the dehydrator fan.
- **Only** use the dehydrator as directed in this manual.
- Not for commercial use. Household use only.

---

## Plug and Cord

 
- **Do not** let cord (or any extension cord) hang over the edge of a table or counter, or touch hot surfaces.
- This dehydrator has a 3-prong grounding plug, and should **only** be used with 120V, 60Hz electrical systems in North America. **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way.
- Any extension cord must also be a grounding-type 3-wire cord.
- This dehydrator uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care.
- The marked electrical rating of an extension cord should be at least as high as the rating of the dehydrator (see page 3).

**SAVE THESE INSTRUCTIONS**


# GETTING TO KNOW YOUR DEHYDRATOR

Your Cosori dehydrator features an automatic fan, which circulates warm air to evenly dry food. The horizontal airflow dries food quickly. Dried foods are a great treat to snack on, because they keep almost all their nutritional value and flavor. Dehydrating is the perfect way to preserve snacks, fruit, vegetables, bread, and even flowers.

## Food Dehydrator Diagram

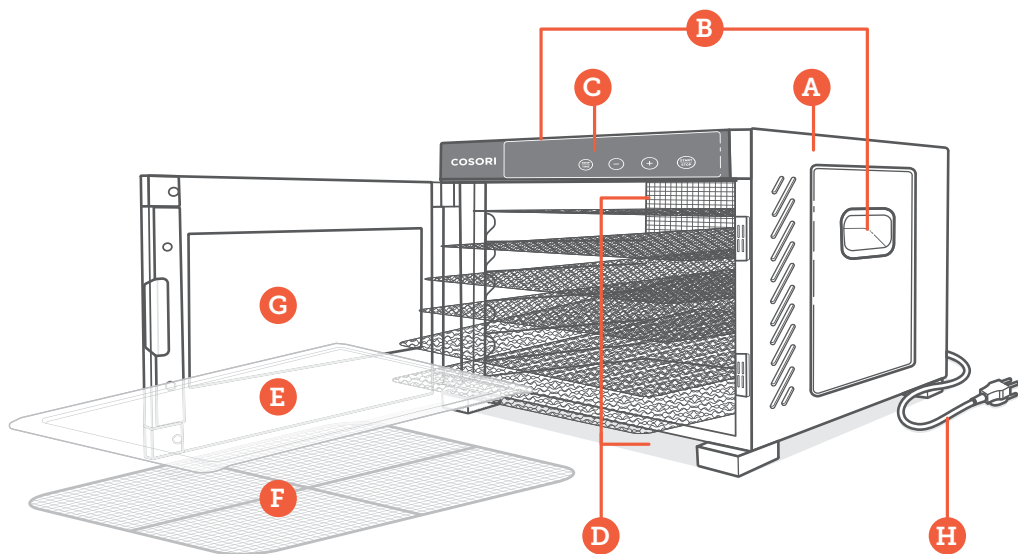

 - A. Housing
- B. Handles
- C. Control Panel
- D. Trays
- E. Fruit Roll Sheet
- F. Mesh Screen
- G. Door
- H. Power Cord
- I. Fan

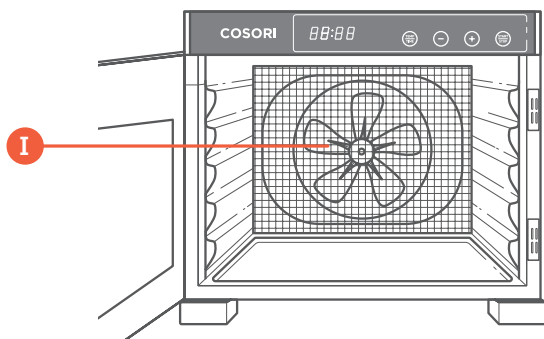

**INSIDE**

# DISPLAY

---



## Controls

- Press **START/STOP** to start or stop the dehydrator.
- Press **TEMP/TIME** once and use the **+** and **-** buttons to change the temperature.
- Press **TEMP/TIME** a second time and use the **+** and **-** buttons to change the time.

# BEFORE FIRST USE

---

## Setting Up

1. Remove all packaging from your dehydrator and its accessories. Make sure all package contents are included (see page 3).
2. Clean the housing, trays, and tray liners with a moistened cloth.  
**NOTE:** The trays are dishwasher safe. **Do not** wash the mesh screen or fruit roll sheet in a dishwasher.
3. Place the dehydrator on a solid, level surface. Plug in. Place the trays inside the dehydrator.
4. Run the dehydrator for 30 minutes at any temperature, without adding any food. Make sure that the room has sufficient ventilation in case the dehydrator produces any smoke or smells. This is normal.
5. Rinse the trays with water. Dry all parts.

**NOTE:** You only need to do this the first time you use the dehydrator.

# USING YOUR DEHYDRATOR

---

## Operation

### **NOTE:**

- Use the dehydrator in a warm, dry room, and place on a stable, level, heat-resistant surface.
- Depending on humidity in the air and moisture in the food, dehydration times may vary.

1. Place food on trays. Rearrange the trays to fit thicker food items. Avoid overloading the trays or overlapping food. Close dehydrator door.
2. Plug in. The dehydrator will beep, and the display will show "**88:88**". The dehydrator will switch to standby mode after 3 seconds, and the display will show "--:--".
3. Press **TEMP/TIME** to choose temperature. The temperature will blink on the display, and the **+** and **-** buttons will light up. Use **+** or **-** to change the temperature (95°F–165°F).

**NOTE:** Temperature changes in 1°F increments. Press and hold **+** or **-** to change the temperature rapidly.

4. Press **TEMP/TIME** again to choose time. The time will blink on the display, and the **+** and **-** buttons will light up. Use **+** or **-** to change the time (0:30–48:00).

**NOTE:** Time changes in 30 minute increments. Press and hold **+** or **-** to change the time rapidly.

5. Press **START/STOP** to start dehydrating. The dehydrator will start heating. **START/STOP** will stay lit, and the other buttons will turn off. Temperature and time will cycle on the display every 3 seconds.

**NOTE:** If you press **START/STOP** again to stop dehydration, the timer countdown will reset and the dehydrator will go into standby mode.

6. Optionally, you can change the time and temperature at any time by pressing **TEMP/TIME**.
7. When the timer finishes, the display will show "End" and heat will turn off. The dehydrator will beep 5 times, and the fan will stop.
8. Use a kitchen towel, heat-resistant glove, or oven mitt to handle the trays.

**NOTE:** The dehydrator will always remember your previous temperature and time settings.



---

## Tray Liners

Your dehydrator comes with 2 tray liners: a fruit roll sheet and a mesh screen.

1. Place a tray liner on a dehydrator tray. Place food on the liner.
2. Once the food is dehydrated, remove the tray and lift the tray liner out of the tray.
3. Remove food. Bending the screen is helpful for removing sticky foods.

### Fruit Roll Sheet

- Use for making fruit rolls and strips from fresh, frozen, or canned fruit. You can also use this liner for pouring purée onto a tray.

**NOTE:** *This liner can be placed on the bottom of the dehydrator to catch any dripping liquids, to make cleaning easier.*

### Mesh Screen

- Use for foods that shrink when dried. This liner will prevent them from falling through tray grates.

## Overheat Protection

- Overheating is rare. If the dehydrator overheats, it will automatically shut down as a safety feature, and will no longer turn on. Contact **Customer Support** (see page 12).

## Tips

- Fruit and vegetables dried in your food dehydrator will look different from those sold in stores. This is because homemade dried foods do not use preservatives, artificial coloring, or artificial additives.
- Check out the Recipe Book for many more tips on dehydrating foods.

# CARE & MAINTENANCE

---

**NOTE:** *Do not* clean any part of the dehydrator with abrasive chemicals, as this will damage the surface.

1. Unplug the dehydrator and allow it to cool before cleaning.

2. Soak trays in hot, soapy water for easy removal of food residue.

3. Use a soft brush to clean the trays and tray liners. The trays and tray liners are dishwasher safe.
4. Clean the dehydrator housing with a damp cloth.

5. Dry all parts before storing or using the dehydrator.

**NOTE:** *The trays are dishwasher safe. Do not wash the mesh screen or fruit roll sheet in a dishwasher.*

# TROUBLESHOOTING

---

Problem	Possible Solution
The dehydrator will not turn on, or the fan is not working.	Unplug the dehydrator and plug it in again.
	The dehydrator may be damaged or malfunctioning. Contact <b>Customer Support</b> (see page 12).
“ERR” indicator appears on the display.	The dehydrator may be damaged or malfunctioning. Contact <b>Customer Support</b> (see page 12).
Foods are dried unevenly.	Cut foods evenly to ensure that they all finish drying at the same time. Avoid overlapping the food.
	Follow the recipes and tips in the Recipe Book.

# WARRANTY INFORMATION

<b>Product Name</b>	Premium Stainless Steel Food Dehydrator
<b>Model Number</b>	CP267-FD
<b>Default Warranty Period</b>	1 year
<i>For your own reference, we strongly recommend that you record your order number and date of purchase.</i>	
<b>Date of Purchase</b>	
<b>Order Number</b>	

## TERMS & POLICY

Cosori warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Cosori will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Cosori is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure by user negligence, abuse, or use noncompliant with the user manual or any additional safety or usage warnings included in the product packaging and manual.

## This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Cosori and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

## ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

### Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto [www.cosori.com/warranty](http://www.cosori.com/warranty) and enter your order number (e.g., from Amazon or Houzz) to register your new product for the extended warranty.

If you are unable to provide the order number for your product, please type a short note in the order number field along with the date you received your product.

### Defective Products & Returns

Should your product prove defective within the specified warranty period, please contact Customer Support via [support@cosori.com](mailto:support@cosori.com) with your order number. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the unit with a copy of your invoice and order number.

# CUSTOMER SUPPORT

---

## We're Here to Help!

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

### Customer Support

**Arovast Corporation**

1202 N. Miller St., Suite A  
Anaheim, CA 92806

### Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Email:** [support@cosori.com](mailto:support@cosori.com)

**Toll-Free:** (888) 402-1684

\* Please have your order confirmation number ready before contacting Customer Support.

# SHOW US WHAT YOU'RE MAKING

---

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Others already in the community await your uploads—just pick your platform of choice below.

Snap, hashtag, and tag away, Cosori chef!

**#iCookCosori**



**@cosoricooks**



**Cosori Appliances**

Considering what to cook? Many recipe ideas are available, both from us and the Cosori community.

## MORE COSORI PRODUCTS

---

If you're happy with this food dehydrator, the line doesn't stop here. Check out **www.cosori.com** for a line of all our beautiful and thoughtfully designed cookware. They might be right at home in your kitchen, too!

# COSORI

## **Questions or Concerns?**

Mon–Fri, 9:00 am–5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684