



Gourmia

MODEL# GFD1680

CUT+DRY AUTO DEHYDRATOR





Enjoy **Naturally** Good-for-You Dried Snacks & Treats from GOURMIA!

With the purchase of the Cut + Dry Dehydrator, you are entering the sweet, healthful and delicious world of natural snacking! Now, you can prepare the fresh fruit, herbs, flowers, vegetables and meat you like and dehydrate them successfully with very little effort. Consider all the snacks you'd like to eat and enjoy...fruit leathers or roll-ups, earthy dried beets, sweet dried carrots, delectable dried pineapple, super-sweet strawberries, the list goes on and on! The results of natural dehydration are not only delicious, they are truly healthful and certainly less costly than purchased dried foods.

We are sure you and your family will love all the delicious trail mixes, granola, dried herbs, meat jerky and other dehydrated treats you will prepare in the Gourmia Cut + Dry Dehydrator. It's never been so easy!

The following pages of this manual give you full and complete instructions for all the functions and features of your Cut + Dry Dehydrator. Inside these pages, you'll find safety information, instructions for operating, assembly, cleaning and maintenance of your Cut + Dry Dehydrator. You'll also find helpful charts for preparing foods for dehydration, along with pre-treatment suggestions and helpful hints. Please read all safety instructions and complete directions carefully for safe usage at all times.

Thank you for your purchase! We hope you will enjoy all the innovative products brought to you by our family at Gourmia.

© 2018 Gourmia

www.Gourmia.com

The Steelstone Group

Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestion in this manual.

Printed in China



SAFETY FIRST p. 6

FEATURES & FUNCTIONS p.9

- Cut + Dry Housing p. 9
- Internal Automatic Fan p.9
- Top Air Vent p. 9
- Back Air Intake p.9
- EasyVue Door p. 10
- Drying Trays p. 10
- Protective Food Sheet p.10
- Drip Pan p. 10

LED CONTROL PANEL p. 13

BEFORE FIRST USE & MAINTENANCE p. 15

FOOD SELECTION & PREPARATION p. 17

- Fruit p. 17
- Vegetables p. 18
- Meat p. 18
- Nuts p. 19
- Herbs & Flowers p. 19

WARRANTY & SERVICE p. 21

IMPORTANT SAFEGUARDS

When operating this electric appliance, basic safety instructions should always be followed. Refer to the following for these instructions.

1. **READ ALL SAFETY & USAGE INSTRUCTIONS BEFORE USING Cut + Dry Dehydrator.**
2. **EXERCISE EXTREME CAUTION: Do not touch hot surfaces or trays while dehydrating.** Burns may occur.
3. AVOID ELECTRICAL SHOCK. DO NOT immerse cord, plug or the Cut + Dry Dehydrator in water or other liquid.
4. Use pot holders or oven mitts when handling the hot Drying Trays, Drip Pan, EasyVue Door, or Protective Food Sheet.
5. UNPLUG Cut + Dry Dehydrator from outlet when not in use or before cleaning. DO NOT add or remove parts or accessories while HOT. Do not let cord hang over edge of table or counter or touch hot surfaces, including the Cut + Dry Dehydrator.
6. Children should not use Cut + Dry Dehydrator unsupervised; close supervision is required when appliance is used near or with children.
7. Never touch, cover or obstruct the Top Air Vent or Back Air Intake during or after operation. Hot air may cause burns. Keep children away from Vent and Intake.
8. Operate the Cut + Dry Dehydrator on a level surface well away from any hot gas or electrical burner, heat source, combustible spray cans or pressurized items.
9. Do not operate the Cut + Dry Dehydrator outdoors.
10. Never operate the Cut + Dry Dehydrator with a damaged cord or plug or one that has malfunctioned or been damaged in any way. Immediately contact Customer Service for analysis.
11. DO NOT add unauthorized accessory attachments. Such use may result in electric shock, injury or fire.
12. Use only factory cord supplied; NEVER add extension cords. When done using, switch control to OFF then pull plug from outlet.
13. DO NOT operate the Cut + Dry Dehydrator when empty.
14. Do not use the Cut + Dry Dehydrator for any use other than intended. Do not use on or near a stovetop or other heat source.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY



Electrical Polarized Plug: This Cut + Dry Dehydrator has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, the plug is intended to be used by inserting it into the electrical outlet only one way. If the plug does not fit securely into the outlet, turn the plug and re-insert. Do not modify this plug. If the plug does not fit the outlet securely, call a qualified electrician for assistance. DO NOT use this plug with extension cords of any kind.



CUT + DRY DEHYDRATOR HOUSING (see reference A.)

The Housing unit for the Cut + Dry Dehydrator holds the Drying Trays in integrated slots, the Automatic Fan and other interior workings. It also contains the removable Protective Food Sheet and Drip Pan. It is designed to securely hold foods on trays while drying.


Internal Automatic Fan (see reference B.) The Automatic Fan is housed internally and circulates warm air throughout the dehydrator for uniform drying. The Automatic Fan operates as directed by the LED Control Panel.

Top Air Vent (see reference C.)


Air is removed from the Cut + Dry Dehydrator via the Top Air Vent. Do not obstruct or cover the vent during operation or while cooling after use.

Back Air Intake (see reference D.)

The Back Air Intake on the Cut + Dry Dehydrator pulls air into the unit and pushes it through the dehydrator housing and trays. Do not obstruct or cover the Back Air Intake during operation or while cooling after use.

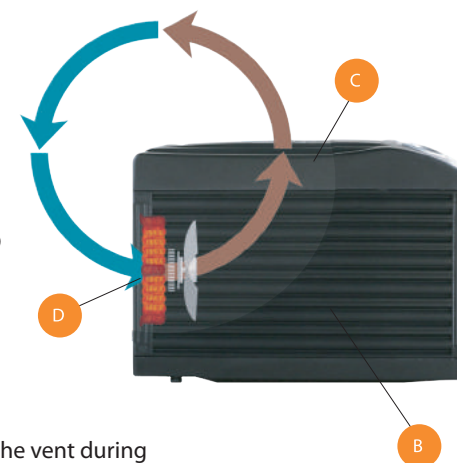

EasyVue Door (fig.1) An important feature of the Cut + Dry Dehydrator is the EasyVue Door, which is transparent for quick viewing. The process of drying can be observed without opening the door. This reduces the loss of heat and allows views of all tray levels.

CAUTION: Use caution when opening the door while food is drying. Although temperatures are not high, burns can occur from hot air.  Use pot holders or mitts while opening and closing the EasyVue Door and handling Drying Trays. Opening the EasyVue Door may increase drying times.



Drying Trays (fig.2) There are 6 (six) plastic Drying Trays included with the Cut + Dry Dehydrator. These trays provide enough space to dry a substantial amount of food in one easy operation. The plastic trays are not


designed to hold very heavy foods. They are perforated thoroughly to allow air to circulate for drying and to allow any moisture or debris to fall to the Drip Pan.

Protective Food Sheet (fig.3) If foods are fragile or thinly sliced, the Protective Food Sheet with smaller perforations holds the food intact as it dries.

The Protective Food Sheet should be used exclusively when making fruit leathers or roll-ups, and it should always be used on top of a Drying Tray. Lightly coat the Protective Food Sheet with cooking spray before adding fruit or other fragile foods for drying. This will allow the food to slip easily off the Sheet after drying.

Drip Pan (fig.4) Although many foods will not drip moisture or debris while drying, the handy Drip Pan catches all so that interior cleaning is not needed.

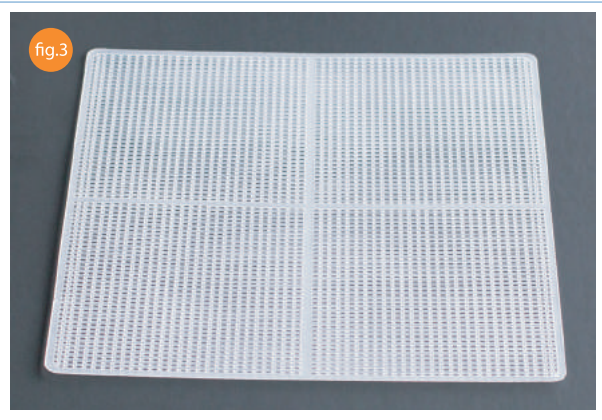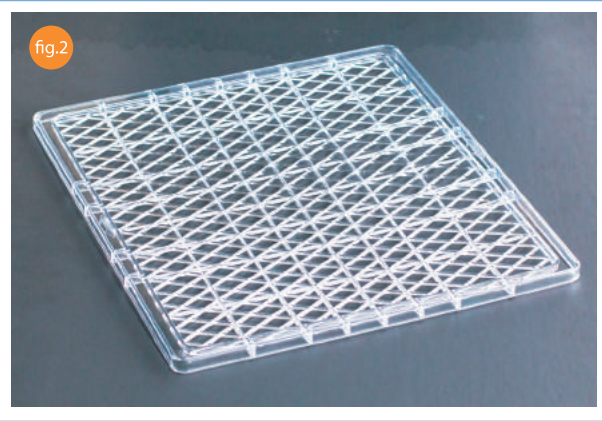

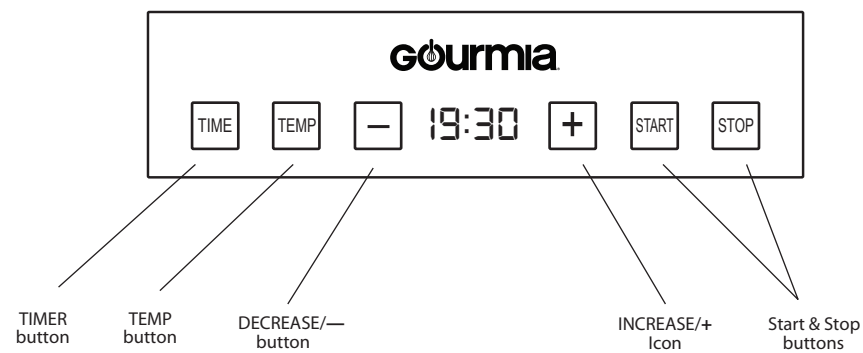

The LED Control Panel holds all the electronic instructions for drying foods. Follow the simple Step-by-Step instructions below to successfully start and complete the drying process.

Setting TIME and TEMP Settings to Start

1. Place prepared foods on the Drying Trays (see p. 17 for food preparation tips). Do not overload the Drying Trays with food.
2. Food should be placed on Drying Trays in single layers ONLY, not touching or overlapping in any way.
3. Plug the polarized plug into a compatible outlet. A BEEP sound indicates the Cut + Dry Dehydrator is receiving power.
4. Slide the EasyVue Door down until it is securely closed.
5. Press the START button on the Control Panel. The drying process will begin right away. The Automatic Fan will start first. The interior Heating Element

will begin automatically heating within 5 seconds.

6. The LED Display on the Control Panel will display the default drying time of 10 hours (10:00).
7. Press the TEMP button on the Control Panel. The LED Display will show the default TEMP of 158°F. The LED Display will then automatically return to display the drying time remaining.

Changing TIME and TEMP Settings while Drying

Occasionally, it may be appropriate to speed the drying process or slow it down, depending on how the drying is proceeding. In order to do so, follow the simple Step-by-Step instructions that follow.

NOTE: The Time remaining in the drying process is always shown on the LED Display during the process.

1. To change the drying time, WHILE IN PROCESS, Press the + button to increase the time or the — button to decrease the time. The time will increase/decrease in 30 minute increments. When the new time is set, the LED Display will show the new drying time.
2. To change the temperature, WHILE IN PROCESS, Press the TEMP button then Press the + button to increase the temp or the — button to decrease the temp. The temperature will increase/decrease in 9°F increments. When the new temperature is set, the LED Display will automatically return to indicate the remaining drying time.

NOTE: Verify the new temperature by pressing the TEMP button.

NOTE: To reset the time and temperature to default time of 10 hours

(10:00) and Temp of 158°F, Press the STOP button to turn OFF. Press the START button to turn ON. The Cut + Dry Dehydrator will automatically return to the default time and temperature.

When Drying Process is Complete

When the drying process is complete, the LED Display will indicate 0:00. The Heating Element will automatically turn off. The Automatic Fan will turn off after 10 seconds. The Cut + Dry Dehydrator will BEEP for 20 seconds as an indicator that the drying process is complete. The LED Display will display END.

Press the STOP button on the Control Panel to turn OFF the dehydrator. Carefully remove food on trays, using pot holders or oven mitts.

Unplug power cord from the wall outlet.



BEFORE FIRST USE

1. Place the Cut + Dry Dehydrator on a level, flat surface that is clean and dry.
2. Ensure that the Cut + Dry Dehydrator is several inches away from obstructions, such as walls, cabinets, doors, and other appliances. Allow enough room above the Dehydrator so the EasyVue Door can be fully opened.
3. Wash the Drying Trays and Protective Food Sheet in warm, sudsy water. Dry thoroughly.
4. Use a soft damp cloth to clean the exterior of the Cut + Dry Dehydrator and EasyVue Door. Dry with a paper towel or soft cloth.
5. Read safety instructions.
6. Press the START button to start the Cut + Dry Dehydrator drying process. Dry the interior and Drying Trays for 30 minutes before adding food. This helps dry the interior for initial use. Smoke or odors are normal during the initial 30 minute drying time. Allow sufficient ventilation.
7. Insert Drying Trays into the Cut + Dry Dehydrator and enjoy!

MAINTENANCE

ALWAYS allow the Cut + Dry Dehydrator to cool completely before cleaning.

Unplug the Cut + Dry Dehydrator before cleaning.

After each use, clean and dry the Drying Trays and Protective Food Sheet in warm, soapy water. Use a damp cloth to clean the Cut + Dry Dehydrator and EasyVue Door, if needed. DO NOT immerse the dehydrator in water. Use non-abrasive cleaners or soft soap only.

Do not place Drying Trays or Protective Food Sheet in dishwasher.

FOOD DEHYDRATING GUIDE

Food	Drying Times	Temp (°F)	Preparation
FRUIT			
Apples	6-7 hours	135-145	slice ¼-inch thick
Bananas	7-8 hours	135-145	slice ¼-inch thick
Blueberries	36-42 hours	135-145	arrange whole berries on trays
Grapes	42-48 hours	135-145	slice in half
Mango	4-6 hours	135-145	slice 1/8-inch thick
Pineapple	8-9 hours	135-145	slice ¼-inch thick
Raspberries	24-28 hours	135-145	arrange whole berries on trays
Strawberries	8-10 hours	135-145	slice ½-inch thick
Tomatoes	6-8 hours	135-145	slice ¼-inch thick
HERBS			
	4-6 hours	100-115	Arrange on trays
VEGETABLES			
Beets	4-6 hours	125-140	Peel, slice 1/8-inch thick
Bell peppers	10-12 hours	125-140	Slice ¼-inch thick
Broccoli	4-5 hours	125-140	Break into florets
Carrots	4-6 hours	125-140	Peel, slice 1/8-inch thick
Celery	3-4 hours	125-140	Slice ¼-inch thick
Kale	4-5 hours	125-140	Arrange whole leaves on trays
Mushrooms	3-4 hours	125-140	Slice ¼-inch thick
Summer Squash	4-6 hours	125-140	Slice ¼-inch thick
Yams	4-5 hours	125-140	Slice ¼-inch thick
MEAT, SEAFOOD & JERKY			
Beef, Poultry or Fish	5-6 hours	150-158	Trim fat off, slice ¼-inch thick

The drying time for any food is dependent on several factors, including the thickness of the food, the amount of food in the dehydrator, the type of foods to be dried and the humidity levels of the weather. Because of these factors, you will want to occasionally check the food as it dries and determine whether or not it is ready to be removed.

One easy way to determine if food is dried is to place a piece in a small, self-sealing plastic bag. Seal the bag and shake it lightly. If moisture appears, the food is not ready to be removed.

Drying Fruit Hints & Tips

- Select fruit that is ripe; avoid fruit that is not yet ripe or over-ripe. If not yet ripe, the texture and taste may be unappealing; if over-ripe, the texture may be mushy and the flavor bland.
- Wash fruit just before drying to remove any debris or dirt.
- Do not use fruit that has blemishes, evidence of bug infestation or worms, or discoloration.
- Cut off parts of fruit that appear to be bruised or damaged in transit.
- Discard pits, stones, seeds and other inedible parts of the fruit.
- Peel fruit, if desired, or if rinds or peels lend a bitter or unappetizing taste or texture.
- Always peel waxed or sprayed fruit.
- Slice or cut fruit as desired (see notes following).

Cutting & Slicing Hints & Tips

Fruit can be peeled and quartered, such as apricots, or sliced thinly, whichever method is best suited to the fruit you are using. Cut plums, cherries, and peaches in half and remove the pits or stones. For fruit such as apples, peel and slice thinly. Consider pre-treatment for apples to make them especially appetizing (see the section following). When cutting fruit, the sizes should be uniform so that the drying is also uniform.

Pre-Treatment for Fruit:

Preparation for drying can include dipping fruit into their own juices, such as lemons, limes and other citrus fruit.

Sodium Bisulfite (food grade) can also be used. Use a ratio of 1 teaspoon to one quart of water. Dipping fruit into the water mixture preserves color and nutrients.

Steaming can also be used to set color in fruit. Steam only a few minutes over a gentle heat. Remove and cool

18

18

18

- 18

18

18

18

18

- 18

18

- 18

18

- 18



18

- 18

18



WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

For Customer Service or Questions, Please call: 888-552-0033

Gourmia
www.gourmia.com



Gourmia

www.gourmia.com